

BOTH ENDS OF THE CABLE HAVE TO GO TO EITHER THE THERMOSTAT OR THE CONTACTOR, OR OTHER POWER SOURCE.


SPLICES MUST BE TOTALLY ENCASED IN SCREED.

MAINTAIN 1/2 OF RECOMMENDED CABLE SPACING BETWEEN THE CABLE AND THE WALLS OR OTHER PERMANENT STRUCTURE.

CABLE SPACING REFERS TO THE DISTANCE BETWEEN THE PARALLEL RUNS OF CABLE.

DIAMETER OF RETURN BEND MUST NEVER BE LESS THAN 2 INCHES.

MAINTAIN RECOMMENDED SPACING BETWEEN CABLE ON THE HOME RUN.

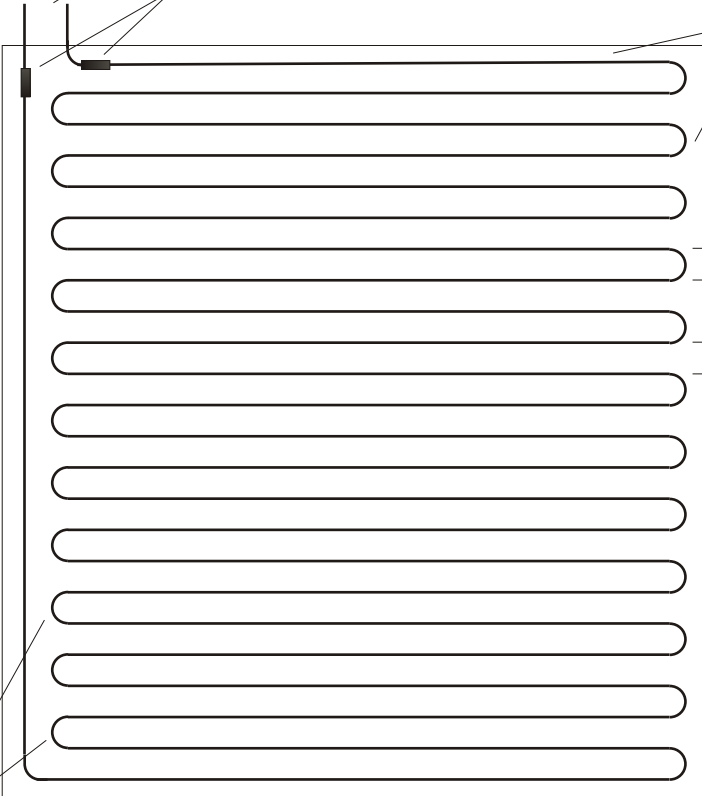

Orbit Manufacturing	
CABLE PLACEMENT I	
Drawn By: jsa	ORB 20022 Rev. 0